



Warranty and Statement

Advanced Misting Systems, warrants to its customers that Advanced Misting Systems products, excluding nozzles, to be free of defects in materials and workmanship for a period of (1) year from the date of purchase to the original purchaser.

With customers proof of receipt Advanced Misting Systems, Inc. will fix or replace the defective part or parts. Advanced Misting Systems, Inc. reserves the right to inspect the defective part or parts prior to replacement. Advanced Misting Systems Inc. will not be responsible for consequential or incidental cost or damage caused by the product failure. Advanced Misting Systems Inc., liability under this warranty is limited solely to the replacement or repair of defective parts.

Neither this warrant nor any implied warranty applies to damage or harm caused by any or all of the following:

1. Freight damage
2. Damage cause from freezing, fire, natural disaster, improper installation, chemicals, unusual characteristics of water supply.
3. Damage caused by parts and/or accessories or components not obtained from or approved by Advanced Misting Systems, Inc.
4. Damage due to misapplication and/or misuse.
5. Normal wear of moving parts or components affected by moving parts
6. Use with Flammable Materials is Forbidden.

The liability of Advanced Misting Systems, INC., under the foregoing warranty is limited to the repair or replacement (at Advanced Misting Systems, INC.'s option) without charge for labor or materials of any parts upon return of the entire pump or other product or of the particular part to the Advanced Misting Systems, INC., factory within the warranty period, at the sole expense of the purchaser, which part shall upon examination appear to Advanced Misting Systems, INC.'s satisfaction to have been defective in material or workmanship.

Advanced Misting Systems, INC., expressly warrants its pumps and other products as above stated. There are no other express warranties. Any implied warranties, including implied warranty of merchantability or of fitness for a particular purpose, are limited in duration to one year from the date of purchase by the original purchaser except in states that do not allow time limitations on implied warranties. There is no implied warranty of fitness for a particular purpose or merchantability when this product is put to an industrial, commercial or rental use.

No person including any dealer or representative of Advanced Misting Systems, INC., is authorized to make any representation or warranty concerning Advanced Misting Systems, INC., products on behalf of Advanced Mist or to assume for Advanced Misting Systems, INC., the obligations contained in the warranty. Advanced Mistin

**216 Avenida Fabricante Suite 207
San Clemente, CA 92672**

760-779-1352 advancedmistingystems.com

Installation Instructions

1000 PSI MISTING PUMP DIRECT DRIVE BASE MOUNTED MODEL 60200K



OPERATION OVERVIEW

The Advanced Misting Systems 1000 PSI Pump takes ordinary home water pressure which is normally about 50-70 PSI for most homes and “boosts” it up to 1000 PSI. The higher water pressure created by the pump enhances mist cooling and heat absorption in two ways. First, it produces a higher flow of water through the nozzle. More water being expelled from the nozzle means more cooling. Second, it creates a smaller finer mist droplet which allows the droplet to evaporate more quickly. Better evaporation means better cooling.

There are many applications for the 1000 PSI Pump. Applications include, Patio Cooling for Homes and Restaurants, Greenhouses, Humidification, Dust control, Odor control and many more.

Caution, Warning and Safety Instructions:


1. **Warning:** Before plugging in the unit for the first time, read the following section carefully. To reduce the risk of electric shock. Plug in supplied grounded cord into a properly grounded receptacle. When servicing this unit, unplug power cord before attempting any service or repairs.
2. Install pump above grade level on a concrete pad to prevent water damage from flooding.
3. **Outdoor use ONLY!** Not for use indoors
4. **Install pump in a suitable place to prevent property damage in the event a leak should occur.**
5. Turn water off and disconnect power to the unit when not in use for extended periods of time.
6. Plug pump into 115 volt, properly grounded outlet.
7. Do not place pump in or in damp or wet environments.
8. Feed system with potable cold water supply only. Do not connect pump to hot water supply.
9. Do not expose pump to freezing temperatures. When winterizing disconnect pump from power and water supply and store in a dry safe place. Make sure all water is drained from the system to prevent damage in the event of a freeze.

PUMP SPECIFICATIONS

Model	Flow GPM	Max. PSI	Volts	HP	RPM	Amps	Dimensions	Weight
60200K	2.1	1000	120	1.5	1725	14	24x15x13	75 lbs.

INSTALLATION INSTRUCTIONS

- Install pump above grade level on a pre-formed concrete pad, 16” x 16”. This pump is non-submersible. Locate pump in a location where flooding and roof runoff does not occur to avoid water damage to the electric motor.
- Verify water feed to pump location is potable cold water supply only.
- Connect cold water feed to pump inlet and connect nylon tubing to pump outlet. **50 feet or more of nylon tubing from the pump outlet to the metal line is recommended to prevent line noise and vibration.**
- The pump has sealed bearings and requires no lubrication. Do not run the pump dry. Operating the pump without water will damage the pump.
- Plug power cord of unit into a properly grounded receptacle. Do not use extension cords.
- On new misting systems, flush lines before installing nozzles. The pump will not build pressure until all the nozzles are installed.
- Do not exceed 1000 PSI operating pressure.
- **Winter shutdown:** Unplug pump power cord, shut off water supply, remove filter bowl and drain water. Also drain water out of all lines, to prevent freeze damage to pump or lines.
- **Annual Maintenance Instructions:** Change water filter element.

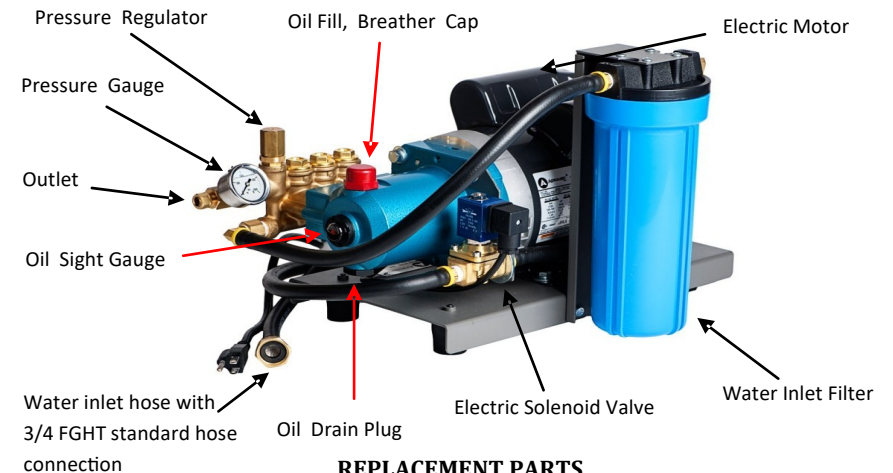

REPLACEMENT PARTS

Pump Oil	Filter Element	Drain Valve	Seal Kit	Solenoid Valve	Pressure Gauge
57025	57011	52000	76968	30375	57251